



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for EMERSON EWR10D5. You'll find the answers to all your questions on the EMERSON EWR10D5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EMERSON EWR10D5
User guide EMERSON EWR10D5
Operating instructions EMERSON EWR10D5
Instructions for use EMERSON EWR10D5
Instruction manual EMERSON EWR10D5

Quick Guide

DVD Recorder EWR10D5

Playable discs This unit is compatible to play the following discs.

Disc	Logo	Disc	Logo
DVD-VIDEO		CD-DA (AUDIO CD)	
DVD-RW (VIDEO/R mode)		CD-RW (CD-DA FORMAT, MP3 files)	
DVD-R (VIDEO mode)		CD-R (CD-DA FORMAT, MP3 files)	

DVD is a trademark of DVD Format/Logo Licensing Corporation.

• DVD-R/RW discs are supported for playback only. *Some DVD-R/RW discs are not compatible with this unit.

Region codes



 
The number inside the globe refers to region of the world.
This unit can play DVDs that are labeled for ALL regions or for Region 1.

Recordable discs


This unit can record to DVD-R and DVD-RW discs.
DVD-R discs can only be recorded to once and cannot be erased. DVD-RW discs can be recorded to and erased many times.
DVD-R discs can only be recorded in Video mode, while DVD-RW discs can select a recording format between Video mode and VR mode.

Disc type	Disc format	Functions	Attributes
	Video mode 	Playing, limited recording, limited editing	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SEP mode): 600 minutes (4.7GB) (for 12cm) 180 minutes (1.4GB) (for 8cm)
DVD-RW: 1-4x 	VR mode 	Playing, recording, Original/Playlist editing	
	Video mode 	Playing, limited recording, limited editing	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SEP mode): 600 minutes (4.7GB) (for 12cm) 180 minutes (1.4GB) (for 8cm)
DVD-R: 2x, 4x, 8x 			

1 Connections

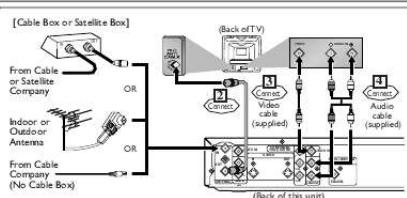

2 Watching TV

 

1. Switch the input selector on your TV to an appropriate external input channel (usually near channel 0).
2. Hit a button on the TV's original remote control (see the table below) to select an external input channel until the DVD recorder's picture appears.


Input Mode Names for Common TV Brands

Admiral	AUX	LUX Series	00	Sharp	00
Curtis Mathis	LINEL, LINEL, 00, 90, 91, 92, 93	Magnavox	AUX CHANNEL	Sony	VIDEO1, VIDEO2, VIDEO3
GE	INPUT, TV/VCR, 00, 90, 91, 92, 93	Panasonic	TV/VIDEO	Toshiba	TV/GAME
Hitachi	INPUT, AUX	RCA	INPUT, TV/VCR, 00, 90, 91, 92, 93	Zenith	00
JVC	A/V CHANNEL, INPUT, VIDEO, ROUTE	Samsung	TV/VIDEO		
Kenwood	AUX	Sanyo	VIDEO		

Hit [SETUP].



 Using [A/V], select "Channel" from the Menu.



Select "Auto Preset" and the unit will start getting available channels in your area.

Follow to the back side of this sheet.



[Your user manual](#)
[EMERSON EWR10D5](#)

Manual abstract:

-----2. 3. 4. 5. 6. 7. 8. Start End CH Speed DISPLAY L REC SPEED REC MONITOR (good) .@/: 1 GHI 4 PQRS 7 ZOOM ABC 2 JKL 5 TUV 8 A TOP MENU MENU/LIST RETURN REV h PLAY B FWD g SP (2H) 8cm Disc LP (4H) EP (6H) SLP (8H) XP (1H) SP (2H) 12 cm Disc LP (4H) EP (6H) SLP (8H) SKIP H PAUSE F SKIP G K { B REC/OTR STOP C CM SKIP L SEP (10H) 180 min Select the desired TV channel ZOOM .@/: 1 GHI 4 PQRS 7 DISPLAY ABC 2 JKL 5 TUV 8 SPACE 0 TIMER PROG.

A Set the date Timer Programming SEP (10H) 600 min Date 1. JAN/01 ----- Start --:-- End --:-- CH L1 Speed K L When hitting L at the current date, Timer Recording mode will change as follows: e.g. January 1st at present JAN/01 L 3. 4.

DEF 3 MNO 6 WXYZ 9 CLEAR CH REPEAT SETUP Daily L Move to next B MON-SAT L Hit repeatedly K { B to select desired recording time Rrecording times appear on the TV screen (30 minutes to 4 hours). Recording will start. Set start and end time Timer Programming MON-FRI L SAT L Date 1. JAN/01 2. 3.

----- Start 12:57AM End --:-- CH L1 Speed K L L L FRI L SUN JAN/31 L REC SPEED REC MONITOR REV h PLAY B FWD g 4. SKIP H PAUSE F SKIP G I Record! K { B 0:30 Move to next 0:30 B REC/OTR STOP C CM SKIP Select the channel number to record Timer Programming (Normal Recording) 1:00 Set the Timer Standby mode Turn the unit off POWER ZOOM .@/: 1 GHI 4 PQRS 7 DISPLAY ABC 2 JKL 5 TUV 8 SPACE 0 TIMER PROG. DEF 3 MNO 6 WXYZ 9 CLEAR CH REPEAT SETUP OPEN/CLOSE A L REC SPEED REC MONITOR Date PLAY B Start 12:57AM End CH Speed K L REV h FWD g 1. JAN/01 1:57AM CH8 4:00 3:30 2. 3. 4. ----- SKIP H PAUSE F SKIP G REC/OTR STOP C CM SKIP When the unit reaches the specified time, recording will stop automatically. Timer Programming Move to next B Select the recording speed After all recordings, finalize your disc! After recording, you must finalize the disc in order to play on other units. Date 1.

JAN/01 2. 3. 4. ----- Start 12:57AM End CH Speed 1H K L 1:57AM CH8 indicator will appear on the front display. To stop recording REC SPEED REC MONITOR REV h PLAY B FWD g Finalizing* Playable OPEN/CLOSE CH REV FWD STOP PLAY POWER REC SPEED REC/OTR SKIP H PAUSE F SKIP G ENTER! I DISPLAY SPACE 0 CLEAR SETUP ENTER TOP MENU MENU/LIST RETURN REC/OTR STOP C CM SKIP S-VIDEO VIDEO L AUDIO R This Unit DVD player Not Playable K { B Timer Recording is now set. I L * You cannot finalize discs in other DVD recorders. Hints for DVD Recording Formatting is not needed when inserting a blank disc. UNIT AUTOMATICALLY PREPARES THE DISC FOR RECORDING. For playback on other DVD players, be sure to record on Video mode and to finalize the disc once recording is finished. OTHER PLAYER MUST PLAY BACK DVD-R or DVD-RW.

IVMN20552 / E6720UD_QG ##### Before you start Owner's Manual DVD Recorder EMERSON AND THE G-CLEF LOGO ARE REGISTERED TRADEMARKS OF EMERSON RADIO CORP., PARSIPPANY, NEW JERSEY, U.S.A. Connections EWR10D5 OPEN/CLOSE CH REV FWD STOP PLAY POWER REC SPEED REC/OTR Getting started S-VIDEO VIDEO L AUDIO R INSTRUCCIONES EN ESPAÑOL INCLUIDAS Please read before using this equipment.

If you need additional operating assistance after reading this owner's manual or to order replacement accessories, please call TOLL FREE : 1-800-605-8453 or visit our web site at <http://www.EmersonAudioVideo.com> Connection to a TV (Before you use this unit, you need to complete connections.) If your TV has AUDIO/VIDEO input jacks, see the section "Connections" on pages 1315. If not, it is still possible to connect this unit to your TV by using a STEREO AUDIO/VIDEO RF Modulator (commercially available).

) In this case, follow the instructions below. 1) The antenna input jack of your TV may have been already occupied. If so, disconnect the RF cable from your TV, and then connect the RF cable to the ANTENNA IN jack of this unit..



[Your user manual](#)
[EMERSON EWR10D5](#)